

---

SE-TPC-08 Andromate

Quick Start Manual

 
## 1.1 Package Content and Accessories

Your package comes with the following items. If any of them is missing, please contact your retailer.

- 1 Andromate Tablet Computer
- 2 Li rechargeable battery
- 3 AC/DC adapter
- 4 USB Cable
- 5 Protective Leather bag
- 6 Docking for Andromate
- 7 User Manual CD



## 1.2 Your device

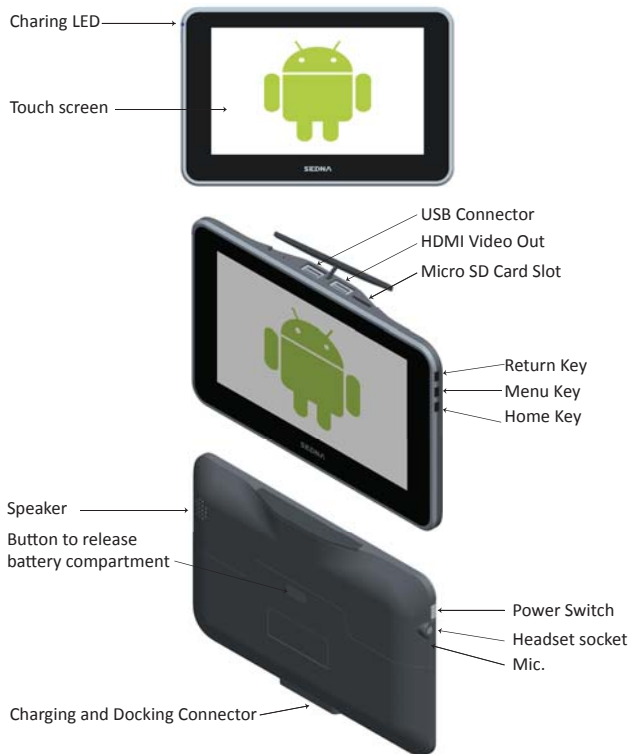

Function of Key and Connectors

### 1.3 Installing Memory Card

A MicroSD card is needed to store photos, music, video, ebook and other data.

To install the MicroSD card :

1. Open the top cover
2. Insert the SD card as show, Make sure the direction of the card is correct.



To remove the MicroSD card :

1. To remove the card safely, tap : Settings > SD card & system storage > Unmount SD card.
2. Open the top cover
3. Push the card to eject the SD card from the slot.

( Note : Sudden removal of the memory card without unmounting it may cause data loss or unpredictable system hang up)

## 1.4 Installing and Charging the Battery

The Battery pack is not installed for safety and for some requirement by law for transportation in some countries.

To install the battery :

1. Push on the release button of the battery compartment at the back of the tablet computer.
2. Remove the battery compartment cover.
3. Place the battery on the compartment ( make sure the “ Face Up” mark on the battery is facing upward.)
4. Put the battery compartment cover back.

To Charge the battery :

For first time use, the Computer should be charged for 8 hours before switching on.

1. Connect the AC/DC adapter DC plug to the socket at the bottom of the Computer ( or Put the Tablet Computer on the Charging Docking provided ).
2. Plug the other end of the AC adapter to the wall outlet to start charging.



AC/DC adapter plug


Charging by direct connection  
to Andromate



AC/DC adapter socket

Audio Out

Charging in the Dock

When the battery is being charged, the orange LED is activated; the  icon is also displayed in the status bar. When battery is fully charged, the orange LED disappears and the blue LED is activated.

## 1.5 Turning the Andromate On or Off

To turn on the Andromate :

Slide the power switch downward and hold it until the company logo appears.

To turn off the Andromate :

 
1. Slide the power switch downward and hold it for 5 seconds.
2. A pop-up windows appears, tap **Power off**.
3. Select **OK** to confirm.

To set the Andromate to Sleep mode :


To set this device to sleep mode, slide the power switch downward briefly. This turns the display off.

To Turn the display on, slide the power switch downward brief again.

## 2.1 Home Screen

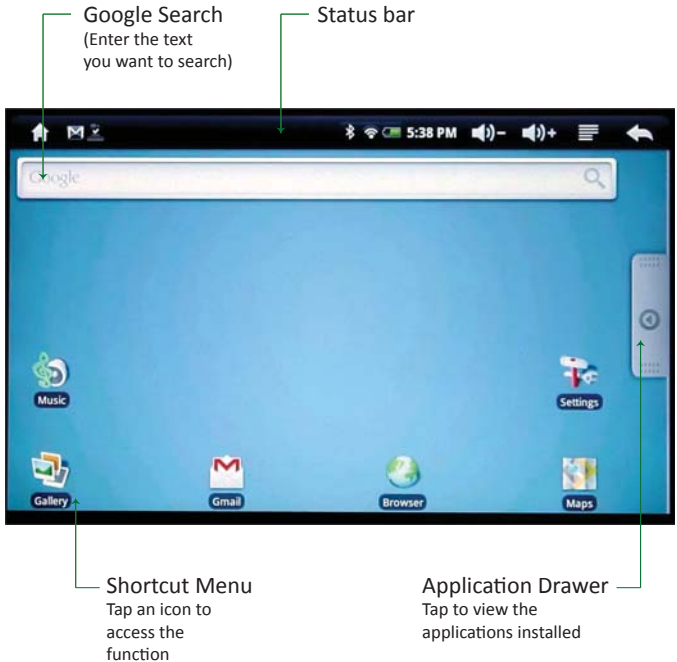

## 2.2 Status bar information :

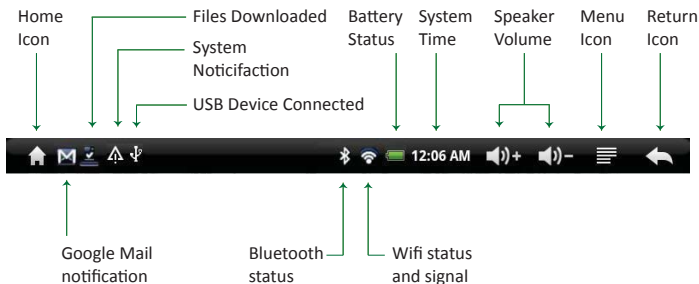 

## 2.3 Shortcut Menu :

To easily access the menu, tap the item on the Home screen.

### Customizing the Shortcut menu :

To add a shortcut :

1. Tap Menu > Add > Shortcuts
2. Tap Applications to display the list of applications
3. Tap to add the items that you want to appear on Home Screen.

To remove a shortcut :

1. Tap and hold the desired shortcut icon. The icon enlarges.
2. Drag the icon to the appeared Recycle Bin icon on the right of the Home screen
3. The shortcut icon is then removed.



## 2.4 Extended Home Screen :

Swipe your finger to the left or right to scroll across the Home screen.

 
The two left and two right extensions to the Home screen provide more space for icons, widgets, shortcuts, and other items.

## 2.5 Application Drawer :

The Application Drawer contains all applications. On the Home screen, tap to display the menu.




Swipe your finger to scroll up or down to access more applications in the device. Tap an icon to open the application.

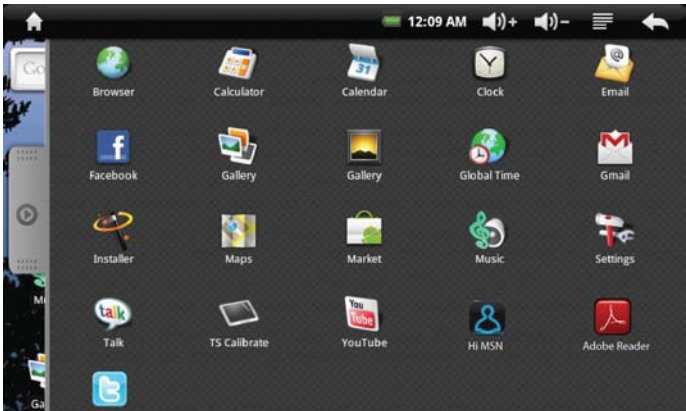

Pre-installed Applications in Application Drawer

## 2.6 On-Screen Keyboard :

 On-screen keyboard appears in portrait mode when an application requires text input, such as messaging, and writing emails. The keyboard input method is activated by default.

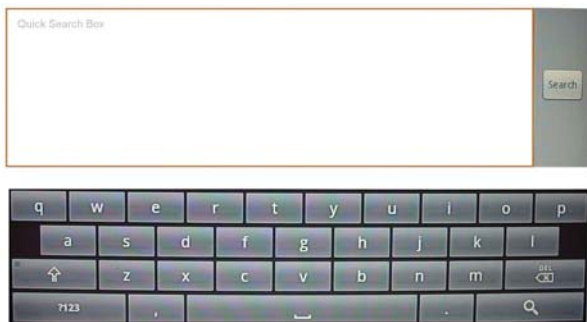

## 2.7 Setting the Input Method :

1. Tap Application Drawer > Settings > Language & Keyboard.
2. In Text settings submenu, a list of input methods is displayed. Select and check the options you prefer.

## 2.8 Changing Input Method :

1. Press and hold on any text-field in program. For eg. in Email, tap and hold the field "To:". The input Method Screen pops up.
2. You may select one of the available Input Methods to use.

### 3.1 Connecting to Internet :

#### Wi-Fi

##### To turn Wi-Fi on or off

1. Tap Application Drawer > Settings > Wireless & networks
2. Tap to check the Wi-Fi function and turn Wi-Fi on or off

##### To Connect to a Wi-Fi network

 
1. Turn Wi-Fi on
2. Tap Wi-Fi settings. The device scans for Wi-Fi signals.
3. Detected networks are displayed below. Tap a network connection then tap **connect**.
4. If you select an unsecured network, then connection is automatically established.
5. Connecting to a secured network, password will be prompted for. Enter the password, then Tap Connect.



## 3.2 Connecting to Bluetooth Devices :

### To turn Bluetooth on or off :

1. Tap Application Drawer > Settings > Wireless & networks.
2. Tap to check Bluetooth and activate.
3. To make your phone visible to others, tap Bluetooth settings and check Discoverable to make your Andromate visible to other devices.

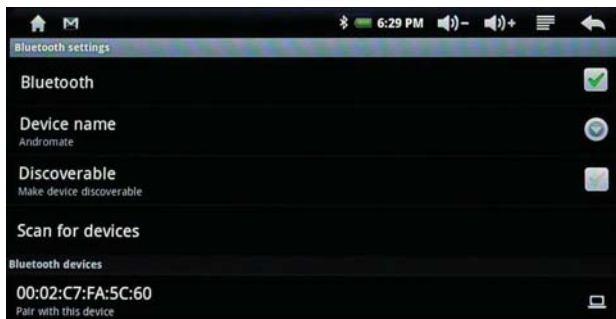

### Connecting to Bluetooth Devices :

1. Tap Application Drawer > Settings > Wireless & networks.
2. Tap Bluetooth settings to view the menu options
3. To search for a new device, tap Scan for devices.
4. Tap the device to connect.
5. Enter the PIN to start pairing, then tap OK.
6. If you connect with an audio device which only supports HSP/HFP, "Connected to phone audio" will be displayed on the screen.
7. If you connect with audio device which supports HSP/HFP/A2DP, "Connected to phone and media audio" will be displayed on the screen.

### 3.3 Connecting to External Monitor / TV

1. Open the top cover, connect the TV / Monittor with HDMI cable to the HDMI connector located at top of the Andromate.

#### Setting to HDMI Output

1. Connect TV/ Monitor to HDMI connector of Andromate
2. Tap Application Drawer > Setting > Sound & Display > Output Select
3. Tap HDMI to turn HDMI Output on

#### Setting HDMI Output resolution

1. Tap Application Drawer > Setting > Sound & Display > Output Select
- 2 Tap HDMI Setting
3. Choose the Resolution and frequency of display to select

#### Remark :

If you are not connect to HDMI output when you carry your device away. Remember to set the "Output Select" back to "None". Otherwise some output can not be displayed on the LCD screen.

### 3.4 Reset to factory default

To Reset Andromate to factory default setting, please follow the following procedures :

( Please note that all installed Program and data will be erased )

1. Turn off the Andromate.
2. Press the “Home”key , and switch on the system. It will enter “Android System Recovery” mode.
3. Press “Menu”key to select “Wipe Data/Factory reset”
4. Press”Return” key to confirm
5. Press “Menu” key to choose “Yes—Delete All Data”
6. Press “Return” key to confirm
7. Press “Return” to leave the menu
8. Switch on the system as normal, all data will be reset to factory default.